




IP + IK Hard Knox 2 Installation Instructions



Step 1

Unscrew the frame/diffuser from body.



Step 5


Place cover plate assembly over base plate making sure it is flush.

Step 6

Secure frame/diffuser to body using supplied screws.

Step 2

Mount base plate to wall/ceiling using all mounting holes provided.

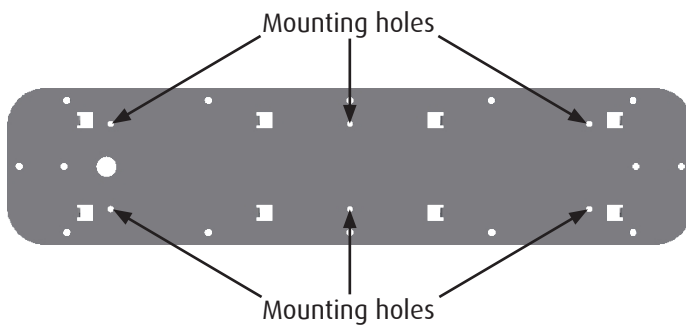

Step 3

Remove cover plate assembly.

Step 4

Wire in 240V.