limeLITE

Wall Light Ned

Installation Instructions

Step 1

Mark and Cut 50mm X 100mm hole in wall, where you want to position the luminaire. Template in box.

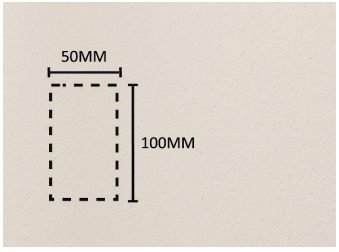

Step 2

Connect power and feed excess wire into wall cavity.

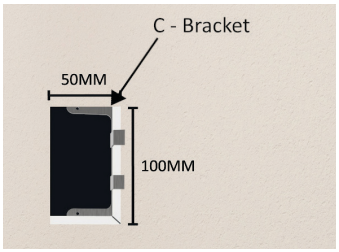

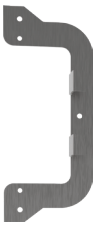

Step 3

Attach C-Bracket to cut out of wall.

Step 4

Screw wall plate to C-Bracket to secure wall plate firmly against wall.

Step 5

Align contacts and push heat sink assembly onto plate.

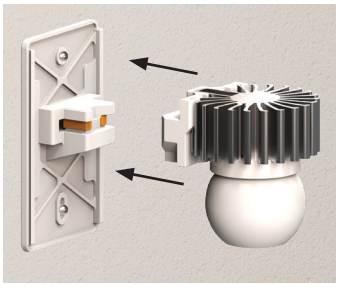

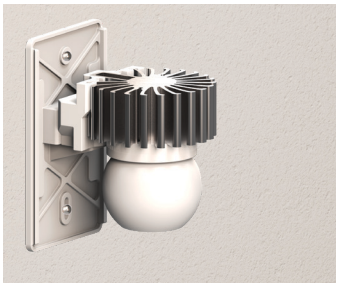

Step 6
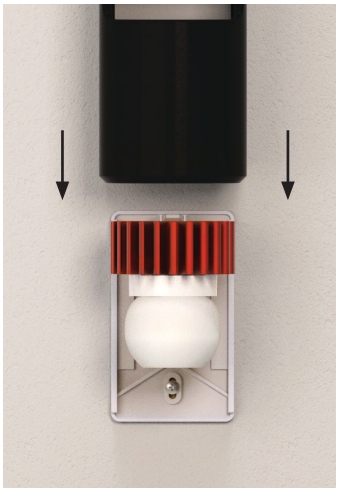
Slide housing onto wall plate.