




Linear 100 Wall Washer Plaster Recess Installation Instructions




Step 1


Mark out and precisely cut rectangular opening in ceiling.
Linear 100 Plaster Recess 1200:

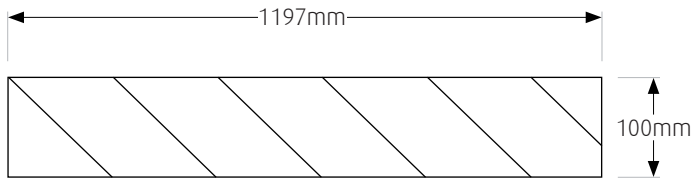

Linear 100 Plaster Recess 900:

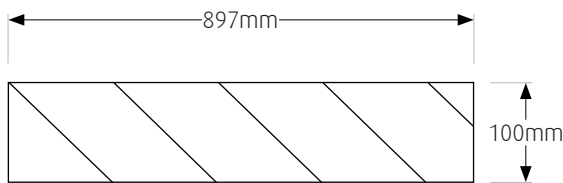


Linear 100 Plaster Recess 600:

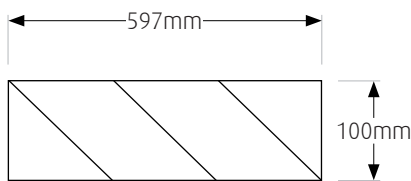

Step 2

Attach plaster frame by pushing frame into cut-out and pressing all tabs firmly into plaster, until frame is flush to ceiling.

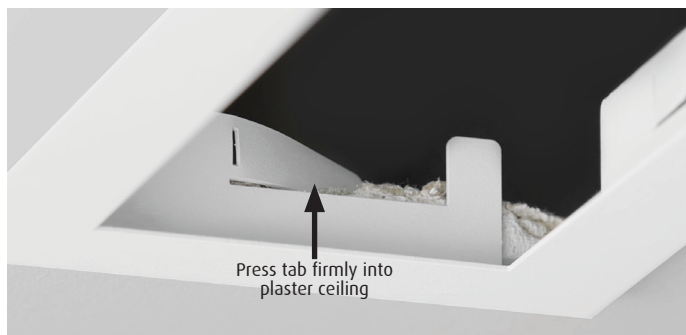

Step 3

Plug flex into plug base. Feed excess wire into ceiling cavity.

Step 4

Feed fitting through frame opening by turning it on its side and inserting one side at a time. Once fitting is in ceiling cavity, drop into position on secured frame.



Note

Position fitting 1/3 of the mounting height away from the wall.

