




# Linear 100 Plaster Recess Wedge Installation Instructions




## Step 1

Mark out and precisely cut rectangular opening in ceiling.  
Linear 100 Plaster Recess 1200:

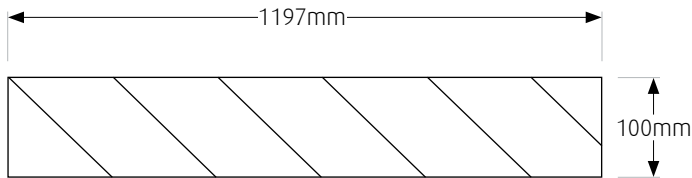

Linear 100 Plaster Recess 600:

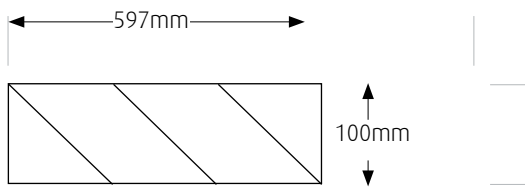

## Step 4

Feed fitting back into frame opening by turning it on its side and inserting one side at a time. Drop into position on secured frame.



## Step 2

Plug flex into plug base. Feed excess wire and the wedged into ceiling and leave beside the cut out.

## Step 3

Attach plaster frame by pushing frame into cut-out and pressing all tabs firmly into plaster, until frame is flush to ceiling.

