





# Linear 100 Plaster Recess Installation Instructions

## Step 1


Mark out and precisely cut rectangular opening in ceiling.  
Linear 100 Plaster Recess 1200:

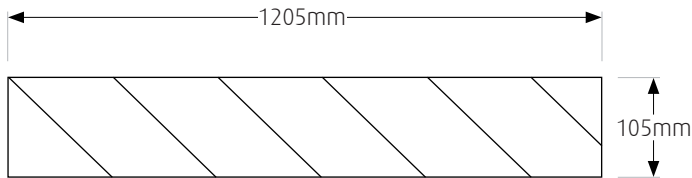

Linear 100 Plaster Recess 900:

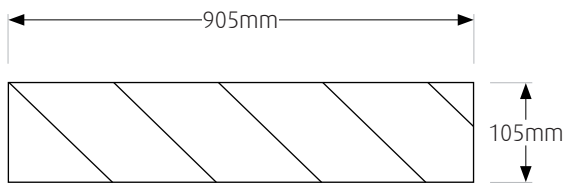


Linear 100 Plaster Recess 600:

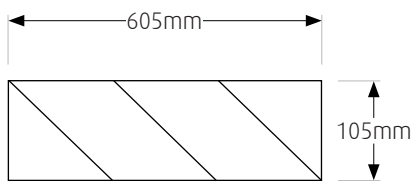

## Step 2

Attach plaster frame by pushing frame into cut-out and pressing all tabs firmly into plaster, until frame is flush to ceiling.

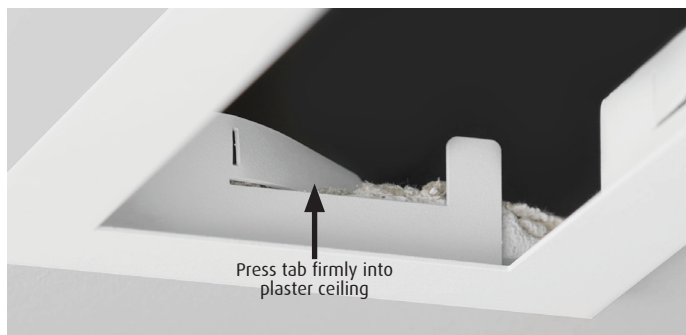

## Step 3

Plug flex into plug base. Feed excess wire into ceiling cavity.

## Step 4

Feed fitting through frame opening by turning it on its side and inserting one side at a time. Once fitting is in ceiling cavity, drop into position on secured frame.







# Linear 100 Plaster Recess Installation Instructions

## Step 1


Mark out and precisely cut rectangular opening in ceiling.  
Linear 100 Plaster Recess 1200:

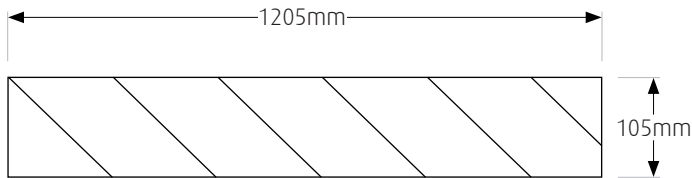

Linear 100 Plaster Recess 900:

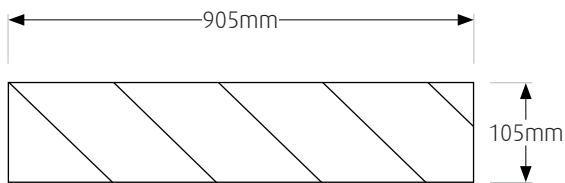


Linear 100 Plaster Recess 600:

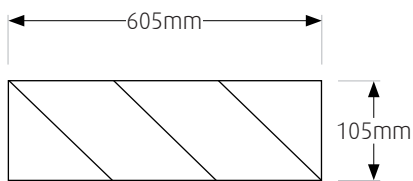

## Step 2

Attach plaster frame by pushing frame into cut-out and pressing all tabs firmly into plaster, until frame is flush to ceiling.

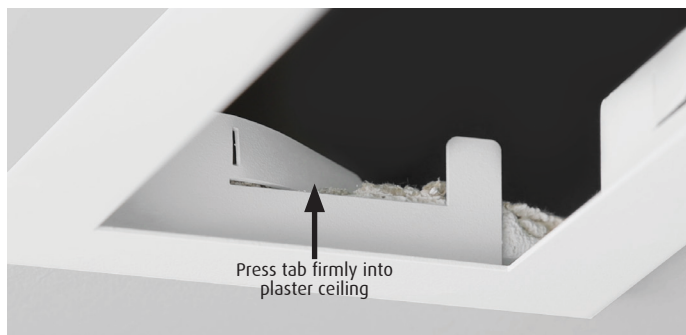

## Step 3

Plug flex into plug base. Feed excess wire into ceiling cavity.

## Step 4

Feed fitting through frame opening by turning it on its side and inserting one side at a time. Once fitting is in ceiling cavity, drop into position on secured frame.

